Auto Coin Sorter

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Auto Coin Sorter sorts loose coins with the push of a button and stores them until you need an extra coin for the drive-through or toll booth. It holds about $10.00 (20–25 coins of each denomination).

INSTALLING BATTERY

Your coin sorter requires one AA battery (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Caution: Use only a fresh battery of the required size and recommended type.

1. Remove the cover from the top of the sorter.
2. Hold down the power button and rotate it counter-clockwise to remove it from the sorter.
3. Insert the battery into the compartment, negative (–) side first.
4. Replace the power button. The sorter runs for a few seconds.
5. Replace the cover.

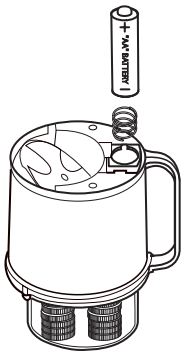

When the coin sorter stops operating properly, replace the battery.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the coin sorter for an extended period of time, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

USING THE SORTER

Notes:

- Do not overfill the coin chamber (no more than 6 coins at a time). This may cause jamming.
- Operate the sorter on a level surface.
- Do not turn the sorter upside-down.
- Do not pour liquids into the sorter.

Hold down the power button and insert multiple coins (up to 6 at a time) into the coin chamber. Continue holding down the button until all of the coins have been completely sorted. The sorter stops when you release the power button.

DISPENSING THE COINS

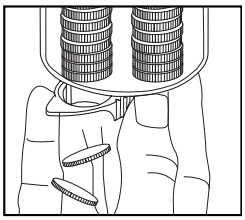

1. Place one hand under the chamber of the coin you want to dispense.
2. Push the textured side of the lever with your thumb. The coin drops into your hand.

TROUBLESHOOTING

Problem	Solution
Coins jam in the coin chamber.	Press the power button several times to free the coin(s). If this does not work, remove the cover and remove the coins with your finger. If you must turn the sorter upside down for any reason, remove the coins first. This prevents them from jamming in the mechanism.
The sorter does not work.	Check to see that you have installed the battery correctly (negative side down).
The sorting wheel does not rotate clockwise or does not shut off.	The battery is not positioned properly. Remove the battery and position it correctly.

CARE

Keep the coin sorter dry; if it gets wet, wipe it dry immediately. Use and store the coin sorter only in normal temperature environments. Handle the coin sorter carefully; do not drop it. Keep the coin sorter away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the coin sorter's internal components can cause a malfunction and might invalidate its warranty. If your coin sorter is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack®

www.radioshack.com℠

© 2001 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

07A01
63-1131

Printed in USA